



Rizzini

- MANUALE DI USO E MANUTENZIONE (I)
- USE AND MAINTENANCE MANUAL (GB)
- MANUEL D'EMPLOI ET D'ENTRETIEN (F)
- BEDIENUNGSANLEITUNGEN (D)
- MANUAL DE USO Y MANUTENCIÓN (E)



Rizzini®



Rizzini®

RIVENDITORE / RETAILER

DATA D'ACQUISTO / DATE OF PURCHASE

MODELLO / MODEL

MATRICOLA / SERIAL NUMBER

CALIBRO / GAUGE

NOME / FIRST NAME

COGNOME / SURNAME

VIA / STREET

COMUNE / TOWN

C.A.P. / CODE

PROV. / STATE

NAZIONE / COUNTRY

E-MAIL

TEL



Rizzini®

25060 Marcheno (Brescia) Italy

Via 2 Giugno, 717 bis

Tel. +39.030861163

Fax +39.030861319

www.rizzini.it

rizzini@rizzini.it

Ai sensi dell'art.13 D.Lgs. 196 del 30/06/2003, la informiamo che i suoi dati qui raccolti saranno oggetto di trattamento informatico e cartaceo ai soli fini della corretta gestione della garanzia. I suoi dati anagrafici potranno inoltre essere utilizzati per finalità di promozione commerciale dalla nostra azienda e da quella ad essa collegate da rapporti commerciali. Il titolare del trattamento è:
RIZZINI SRL - Via 2 Giugno 717 bis - 25060 Marcheno (BS) Italy.

☐

Barrate questa casella per negare il consenso al trattamento dei vostri dati

Certificato d'acquisto da rispedire compilato entro 10 gg. Dalla data di acquisto alla ditta RIZZINI per rendere esecutiva la garanzia.

• **Rizzini non offre alcuna garanzia esplicita o implicita di commerciabilità o di idoneità.**

Complete this warranty certificate and send it to the Rizzini within 10 days of purchase, so that the warranty will be valid.

• **Rizzini offers no express or implied warranties of merchantability or of fitness.**

Certificat d'achat à remplir et à renvoyer à Rizzini dans 10 jour à compter de la date d'achat pour rendre la garantie exécutive.

• **Rizzini n'offre aucune garantie explicite ou implicite de commercialisation ou d'aptitude.**

Schicken Sie bitte diesen Ankaufsschein vollständig ausgefüllt an Rizzini von 10 Tagen nach dem Kauf, um die Garantie gültig zu machen.

• **Rizzini gibt ausdrücklich oder selbstverständlich keinerlei Garantie für die verkauflichkeit oder eignung.**

Certificado de compra para completar y reexpedir a la empresa Rizzini dentro de los 10 días de la fecha de compra con el fin de hacer efectiva la garantía.

• **Rizzini no ofrece ninguna garantía explícita o implícita de comerciabilidad o de idoneidad.**



WARNING:

Read carefully the present manual before using this firearm

INSTRUCTION AND MAINTENANCE MANUAL



The present manual must always be kept with this firearm.
When the firearm changes ownership the manual must be transferred
to the new owner.

SAFETY MEASURES

This product has been classified as a firearm, therefore it is dangerous and potentially lethal.

- Before removing this firearm from its packaging, read the present instruction and maintenance manual carefully and understand it fully. It contains advice on the correct use and maintenance of your Rizzini® firearm.
- Improper, wrong or careless use of this firearm may cause property damage, serious injury or death.
- Use only Rizzini® original parts and accessories. The use of non original parts and accessories may cause the warranty to become void.
- **MAKE SURE THAT ANY PERSON USING OR HAVING ACCESS TO THIS FIREARM READS AND UNDERSTANDS FULLY THE ENTIRE MANUAL PRIOR TO USE OR ACCESS.**
- Rizzini® assumes no liability for product malfunction or for physical injury or property damage resulting from criminal or negligent use of the product, improper or careless handling, unauthorized modifications, use of defective, handloaded, reloaded or remanufactured ammunition, corrosion or failure to perform maintenance.
- It is your responsibility to know and abide by local laws governing the sale, transportation and use of firearms in your country.
- Before leaving the factory, the firearm is proof-tested by the Banco Nazionale di Prova Italiano (the Italian testing authority), and then inspected and packed. Once the firearm leaves the factory, Rizzini® ceases to be able to control the way it is handled. Carefully inspect the firearm at the moment of purchase, to verify that it is unloaded and intact.
- The warranty for the firearm is valid only for the original purchaser. It automatically becomes void when the firearm changes ownership.
- To verify that the product you purchased is original, check for the presence of our marking both on the receiver and on the barrel. 


DATA

The firearm's data are contained in the Certificate of Warranty provided with the product.

SAFETY CHARACTERISTICS

The safety systems on our firearms constitute additional preventative measures, yet they do not exempt users from careful and responsible use of the product.

Note: the safety is engaged when the slider is pushed backwards and reveals the "S" letter completely.

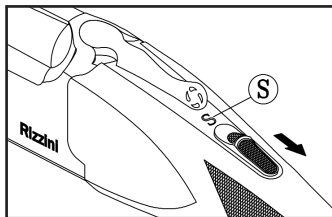

When used properly, this safety system can help prevent unintentional discharge.

SAFETY INSTRUCTION


- Before using the firearm for the first time, get familiar with its technical and mechanical features. Your dealer or your shooting instructor can provide the information you need. For any further information, please contact Rizzini@: Rizzini srl, Via 2 Giugno 7/7 bis, 25060 Marcheno (BS) Italy. Tel.+39.030.861163 Fax +39.030.861319, e-mail: rizzini@rizzini.it website www.rizzini.it
- Never leave the firearm unattended and always make sure it is unloaded before performing any assembly, disassembly or maintenance operations.
- Always point the firearm in a safe direction and handle it as if it were loaded.
- Never allow other people to use your firearm and never use other people's firearms before checking their conditions in person.
- While carrying the firearm at the shooting range, always keep it unloaded and open until you are ready to fire. Once you have fired, unload the firearm immediately.
- Both at the shooting range and when hunting, always keep the safety of the firearm engaged until you are ready to fire.
- Make sure the barrels are free from any obstruction before loading and always use cartridges of the same caliber of the firearm.
- Always wear ear protectors and goggles to prevent eye and other organ injury. Encourage bystanders to do the same.
- Taking alcohol or drugs may dangerously hamper your physical abilities and would represent criminal carelessness regarding your own and others' safety and integrity. Even medicines may affect your behaviour; therefore checking with your doctor is recommended.
- Never keep a loaded firearm inside a vehicle or placed in an unstable position. Make sure the firearm is unloaded and open during transport.
- Keep fingers away from the trigger until the moment of firing.
- Always identify your target and be aware of what is behind it.
- Always store the unloaded firearm separately from the ammunition and out of the reach of children and other unauthorized people.
- If the firearm is dirty, clean it immediately to ensure safe and correct operation.
- Despite safety systems, if a loaded firearm is dropped or hit by another object it may fire accidentally.
- Never run, jump over any obstacle such as ditches or creeks, climb fences or trees with a loaded firearm.
- Never follow a partner with your firearm loaded.
- If your firearm is not operating properly, stop firing immediately. Never force the receiver if it is stuck, since it may cause ammunition to explode, thus provoking injury, death, and/or damage to your firearm and other property.
- Never fire at hard and flat surfaces like water or rock. The bullet or the shot may bounce off and travel in unpredictable directions, thus hitting you or objects which are out of your sight, causing injury, death or property damage.

AMMUNITION

- Since your firearm has been designed to be used with specific caliber ammunition (verify your firearm's caliber and chamber, which is stamped on it), use only original ammunition with the correct caliber that is good quality and industrially manufactured.
- Never use re-charged or manually-charged ammunition.
- Manufacturers design firearms and ammunition complying with precise safety requirements. Since manually-charged ammunition rarely meets such requirements, it shouldn't be used. If ammunition that is too small or has a different caliber from that of the firearm is inserted in the chamber; it may move forward inside the barrel and become hidden, thus making the shooter or hunter to load again and causing the firearm to explode at the moment of firing.
- In order to fire steel shots, the firearm must be tested and receive approval by the Italian testing authority, and receive their marking stamped in the sleeve. Also, interchangeable choke tubes must be approved and marked "Steel Shot". 

ASSEMBLING THE FIREARM


Remove the fore-end from the barrel's action on the release lever (Fig.1). Do not attempt to insert the barrels in the receiver while the fore-end is mounted. Rotate the unlocking key to the right until it locks (in double-barreled shotguns, the key must always be guided; it won't lock automatically). Insert the barrels in the receiver, making sure the sleeve's hinge pin housings match the receiver's hinge pins (Fig.2-3) (as far as double-barreled shotguns are concerned, match the barrel locks on the sleeve with the corresponding housings on the receiver). Tilt the barrels upwards with a smooth and regular movement. When the key springs (in double-barreled shotguns the key must be guided), the barrels are properly locked to the receiver (Fig.4).

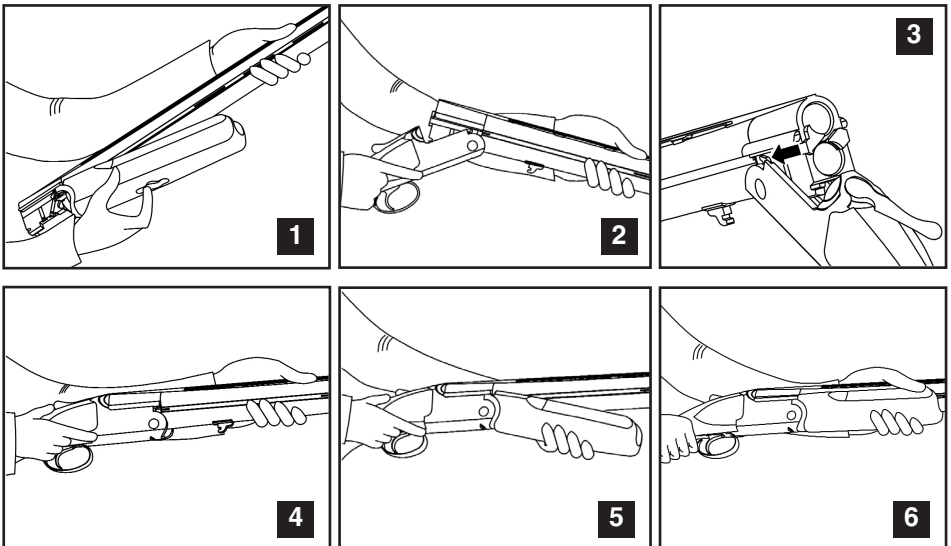

TO DISASSEMBLE SHOTGUN


Warning: To prevent the firearm from discharging accidentally, make sure it is unloaded before disassembling it.

Remove the fore-end from the barrels acting on the release lever (Fig.1). Rotate the unlocking key to the right and open the firearm completely, tilting the barrels. Extract the barrels from the receiver with a vertical movement (Fig.2). Mount the fore-end back on the barrels making the two parts adhere with a gentle pressure (Fig.3). We recommend bringing back the unlocking key to its central position before storing the firearm in its case. You can do that by keeping the key pushed to the right and pressing its pin on the receiver face. Once the pin has been pressed all the way down, release the key so that it can go back to its central position (in double-barreled shotguns, the key always goes back to its central position automatically).

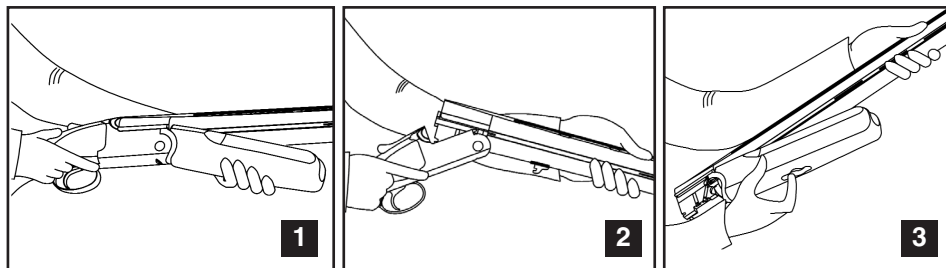

CLEANING THE BARRELS

- At the end of the day in which the firearm has been used, clean the bore of the barrels using a cloth pipe cleaner. Performing such cleaning consistently will spare you the need to use metal-brush pipe cleaners.
- The external part of the barrels and every metal part of the firearm should be cleaned using a cloth dampened in Rizzini® oil, to remove every trace of dirt or sweat, which are the worst enemies to steel.
- If you intend to store the firearm for a long time, (i.e., at the end of the hunting season,) the trigger group mechanism needs to be cleaned and covered with a thin layer of Rizzini® oil. Never use grease to perform such operation.
- To access the trigger group, remove the stock using the specific key (Fig.1) supplied with competition models. For hunting models, the key is available at Rizzini®. Removing the stock allows removal of the side plates in models that are equipped with them (Fig.2).

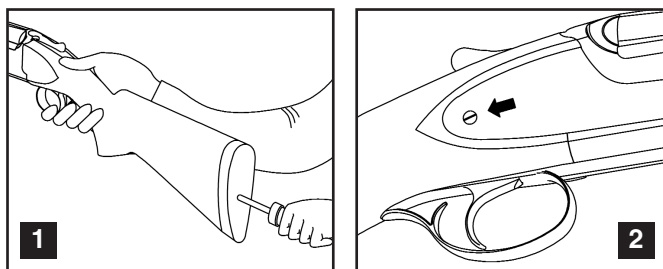

Warning: Such operations can be performed by people who are familiar with firearms. If you have any doubt, ask your gunsmith.

SERVICE AND REPAIR

Warning: Use only the supplied key and never force the screws to avoid damaging the adjustment device.


Warning: Use only original spare parts that are authorized by Rizzini to ensure correct operation of your firearm.

- Each country has state and local laws governing the transportation of firearms. Ask a local authorized gun dealer before shipping your firearm. When shipping your firearm, make sure it is unloaded.
- Pack the firearm without accessories and ammunition, in a carefully padded box; and insure against theft and loss.
- Include a note with the following details: the problem, the model, the serial number and the return address. Attach a copy of the firearm declaration.
- Never attempt to modify or repair your own firearm.
- In case your firearm needs to be repaired or adjusted, take it or ship it (unloaded) to Rizzini®, Via 2 Giugno 7/7 bis, 25060 Marcheno (BS), Italy.

STOCK WITH ADJUSTABLE COMB

To adjust the stock drop: loosen the two screws on the side of the adjustable comb and give it the desired drop using the graded scale notched on the support columns. Tighten the screws to lock the comb in position.







To adjust the cast of the comb: loosen the two screws and remove the adjustable comb completely (Fig.1), then loosen the two screws on the support columns (Fig.2) and adjust the columns in the desired position (Fig.3). Now block the columns in the new position tightening the two locking screws and reinstall the comb.

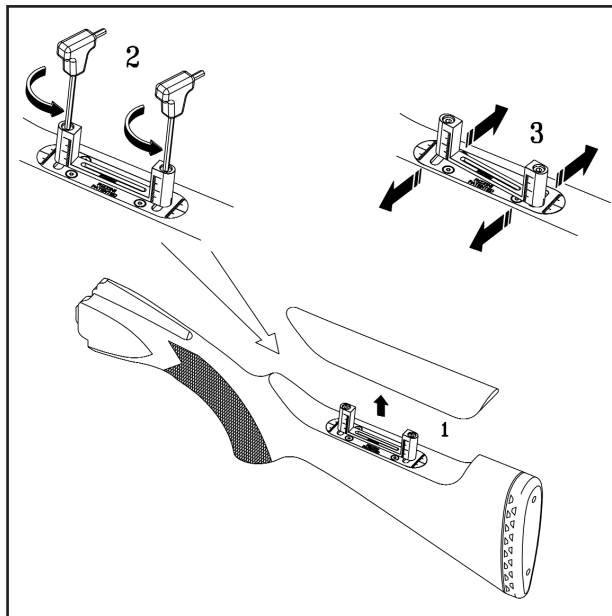

Warning: Use only the supplied key and never force the screws to avoid damaging the adjustment device.

ADJUSTABLE RIB


To change the inclination of the rib, the adjustment ring must first be unlocked by loosening, with the proper tool, the locking screws on the head of the ring support (Fig.1). Then turn the ring in order to obtain the desired position, using the graded scale notched on the rib support as a reference (Fig.2). Once the rib has reached the desired position, tighten the locking screws (Fig.3). To obtain the results expected from the adjustable rib, the stock drop must be adjusted accordingly, so that a constant line of sight is kept irrespective of the rib position.

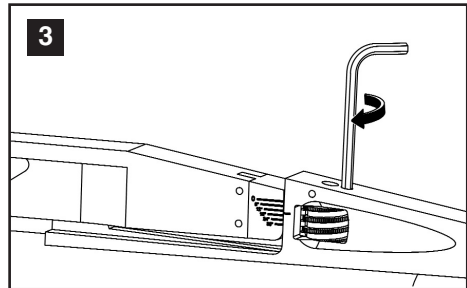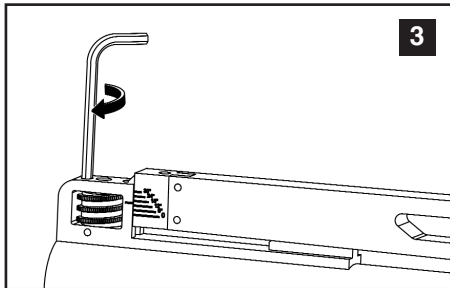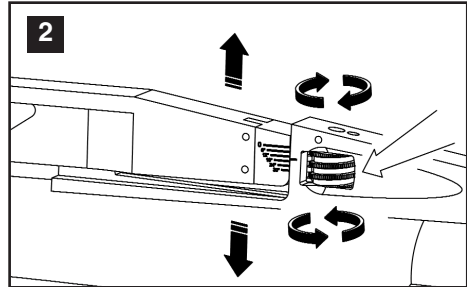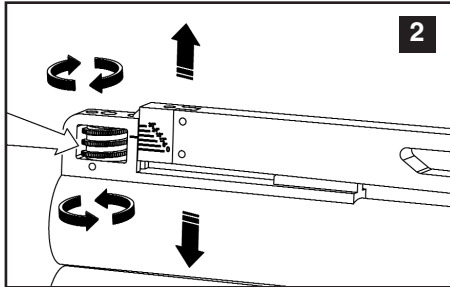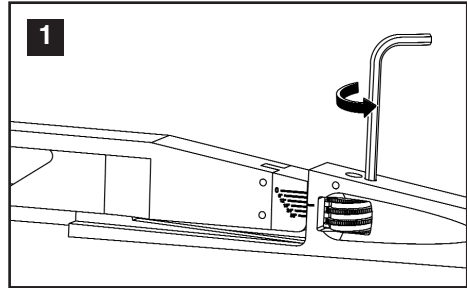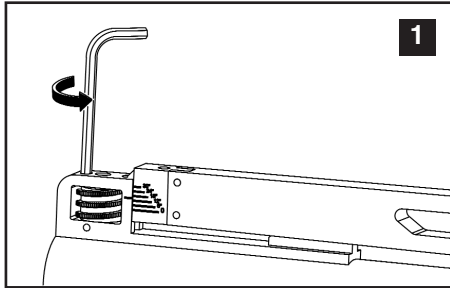

Warning: Each movement of the rib must correspond to the opposite movement on the other end of the rib.

INRECHANGEABLE CHOKES

- Install the choke tubes manually on the barrels. Do not force if difficult. Instead, remove the choke tube and rub the barrel thread clean using the dedicated tool placed on the back of the key. The following action with the key should not require any strength, but only a light pressure.

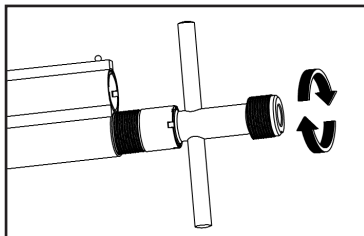




- Every time you clean the barrels, choke tubes must be cleaned and lubricated too. If, for any reason, the choke tubes are deformed or show any dents, they need to be replaced to avoid jeopardizing and the barrel's ballistic performance.

- Use of steel shots is not recommended with 1-star choke tubes (F) and 2-star ones (IM).




REMOVABLE TRIGGER GROUP

Warning: Removal and insertion of the trigger group must be performed exclusively when the firearm is unloaded (empty cartridge chamber).

Removal: Retract the safety lever completely until you hear the release sound (Fig. 1), then remove the trigger group by grabbing it on the trigger guard and pulling downwards (Fig. 2-3).

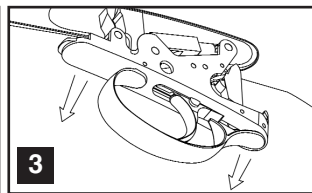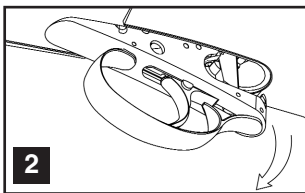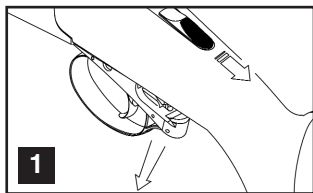

Insertion: Place the front part of the trigger group in the dedicated slot on the receiver (Fig. 1), then rotate upwards to complete the insertion (Fig. 2-3). The safety lever doesn't need to be retracted for insertion of the trigger group.

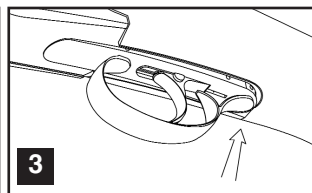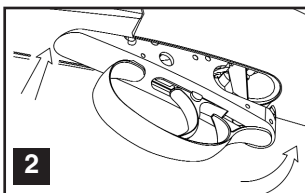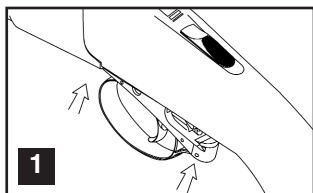

Notice: Rizzini® assumes no liability for any firearm malfunction resulting from incorrect implementation of the procedure.